

User Manual of Quik Series ESC for Car V2.0

Features

- Full protection feature including low voltage, over-heat, throttle signal lost, startup protection and self-check.
- Compatible with sensorless brushless motor.
- Excellent startup performance, great throttle linear and quick throttle response.
- Support highest motor speed 240,000RPM(2 poles), 80,000RPM(6 poles) and 40,000(12 poles).
- The parameters of ESC can be configured via program card or key .
- System can automatically detect throttle neutral point and neutral range is adjustable.
- Three work mode can match different requirement.
- 4 steps of maximum reverse force adjustment, 5 steps of maximum start force adjustment.
- 3 steps of maximum brake force adjustment, 5 steps of drag brake force adjustment, 4 steps of initial brake force adjustment.
- Support 1 cell operation (min voltage: 3V, only available for XC-6A and XC-10A).

Specification

P/N	Continuous current	Battery Cell		Dimension (mm) L×W×H	Weight (g)	BEC	Program By card	Program By key
		Li-XX	Ni-H					
XC-6A	6A	1-2	3-8	12 x 20 x 5	4	1A/5V	Yes	NO
XC-10A	10A	1-2	3-8	22 x 17 x 7	8	1A/5V	Yes	NO
Quik-30A	30A	2-3	4-9	45x32x20	50	2A/5V	Yes	Yes
Quik -45A	45A	2-3	4-12	45x32x20	50	2A/5V	Yes	Yes
Quik -60A	60A	2-4	4-15	47x41x29	80	2A/5V	Yes	Yes
Quik -80A	80A	2-4	4-15	47x41x29	80	2A/5V	Yes	Yes
Quik -100A	100A	2-4	4-15	47x41x29	80	2A/5V	Yes	Yes
XC-150A	150A	2-6	5-18	96x55x21	180	0.2A/5V	Yes	NO
XC-120A-HV	120A	2-10	5-30	96x55x21	180	0.2A/5V	Yes	NO

Note: For XC-150A and XC-120A-HV, an UBEC or individual battery pack should be required to power the receiver and servos, and the red line (+5V) in 3 pin must be pulled out !

Using ESC

Normal Startup Procedure

Move throttle stick to the neutral position → Switch on the transmitter → Connect battery pack to ESC → System detects the neutral throttle signal, makes a long “beep-” sound → System detects battery voltage and makes several short “beep-” sounds, which denotes the number of battery cells → when self-test is finished → “♪ 1 2 3” tone should be emitted → ready for start.

Setting Throttle Range (Throttle range should be setup when a new transmitter is being used)

Switch off the ESC → Switch on the transmitter → Press and hold the “SET” KEY → Switch on the ESC → Push the throttle stick to the top point of forward within two seconds → wait for one second → System detects the Max throttle signal, and makes two “beep-” sounds, which denotes that Max throttle has been confirmed and saved → Pull the throttle stick to the top point of backward → System detects the Min throttle signal, makes two “beep-” sounds, which denotes that Min throttle has been confirmed and saved → Release the “SET” KEY → Setting is finished.

Push the throttle stick to the neutral position → System detects the neutral throttle signal, makes a long “beep-” sound → System detects battery voltage and makes several short “beep-” sounds, which denotes the number of battery cells → when self-test is finished → “♪ 1 2 3” tone should be emitted → Ready for start.

If the system doesn't detect the throttle signal, it will make “beep-” sounds continuously without stopping.

Any fault in self- test, or voltage is over , it will make 20 very short “beep-” sounds.

LED will light according to ‘beep-’ tone.

The LED Status

- 1, The green LED lights when the car go forward, the red LED lights when the car is backward, both the red and green LED light when the car is braking
- 2, when the car stops, red LED and green LED don't light.
- 3, both the red and green LED flash, when the voltage is low or over, or the ESC is over-heat.

Protection

- A. **Low voltage protection:** When power voltage is lower than the cutoff threshold, ESC will cut off output power.
- B. **Throttle signal lose protection:** The ESC will cut off the motor, if throttle signal lost for 0.5 second.
- C. **Overheat protection:** output power will be reduce to cool down if temperature of the board of CPU gets to 100°C, and the output power will raise after temperature gets low.
- D. **Self-check:** ESC will start self-test when power on, if self-test fail, ESC will continuously emit 20 short “beep-” tones.


Configurable Parameter With Program Card (LCD)

1. **OffVolt (Low voltage Protection threshold, Cutoff voltage):** User can set proper cutoff voltage according to cell quantity in range of 00.0-49.9V, the default is 00.0V。
Note: System will detect battery cells and calculate proper threshold automatically if this setting is 00.0V, protection threshold for each Li-XX cell is 2.8V. For example: if the battery pack is 3 cells Li-xx, cutoff voltage will be: $2.8V \times 3 = 8.4V$.
2. **Brake Force: 50%, 75%,100%.** Default is 100%. The ESC provide proportional brake function. The brake force is related to the position of the throttle stick. It refers to the maximum brake force when the throttle stick is pushed to the top point of the backward zone.
3. **Drag Brake: 0、 5%,10%,15%,20%.** Default is 0. When the throttle stick is located at the neutral zone, the ESC provide a slight brake force.
4. **Run Mode: One, Two, Two2.** Default is Two2.
One: the car can go forward only, and brake continuously if push the throttle stick to backward zone.
Two: Bi-directional mode, the car go forward when the throttle stick is located at the forward zone, when the throttle stick is located at the backward zone, the car will go backward, the brake will occur when direction change.
Two2: Conditional Bi-directional mode. With this option, the car go backward only when car is stop and throttle stick is pushed from neutral zone to backward zone. When car is running forward, push throttle stick to backward zone, car will keep brake until it stops, the throttle stick return the neutral zone, and push the throttle stick to the backward zone, then the car will go backward
5. **Start Force: 20%,25%,30%,35%,40%.** Default is 30%. It refers to the maximum force when the car start.
6. **Timing : low, middle ,high and highest.** Default is middle. Low advance timing is recommended for high inductance and low KV motors. High advance timing is recommended for low inductance and high KV motors.
7. **Neutral Range: 6%,8%,10%.** Default is 8%. Within this zone, the motor will be turned off.
8. **Initial Brake Force: 5%,10%,20%,30%.** Default is 5%. It refers to the brake force when the throttle stick is located at the initial position of the backward zone.
9. **Reverse Force: 25%,50%,75%,100%.** Default is 50%. It refers to the maximum force when car run in reverse direction.

Programming the ESC with key

1. Enter program mode


- 1、 Turn off the ESC, Switch on transmitter, keep throttle stick to the neutral position
- 2、 Press and hold the “SET” KEY, Switch on the ESC
- 3、 Wait for 3 seconds, special tone like “♪ i3i3” should be emitted ,which means program mode is entered



4. Exit program

There are two ways to exit program mode:

- 1、 In step 2, after 3 long tone (The item #11), please release the KEY within 2 seconds.
- 2、 In step 3, after special tone “♪ 5 6 5 6” , please release the KEY within 2 seconds.




2. Select programmable items

After entering program mode , hold the “SET” KEY continuously, you will hear 11 tones and red led flash in a loop in the following sequence. If you release the “SET” KEY within 2 seconds after one kind of tone, this item will be selected, and enter step 3

- | | | |
|---|---|--|
| (1) “beeb-” | (1 short tone, red led flash 1 short times) | Brake Force |
| (2) “beeb- beeb-” | (2 short tone, red led flash 2 short times) | Drag Brake |
| (3) “beeb- beeb- beeb-” | (3 short tone, red led flash 3 short times) | Run Mode |
| (4) “beeb- beeb- beeb- beeb-” | (4 short tone, red led flash 4 short times) | Start Force |
| (5) “beeb----- ” | (1 long tone, red led flash 1 long times) | Li-xx cells |
| (6) “beeb----- beeb- ” | (1 long 1 short tone, red led flash 1 long times and 1 short times) | Cutoff threshold |
| (7) “beeb----- beeb- beeb-” | (1 long 2 short tone, red led flash 1 long times and 2 short times) | Timing |
| (8) “beeb----- beeb- beeb- beeb-” | (1 long 3 short tone, red led flash 1 long times and 3 short times) | Neutral Range |
| (9) “beeb----- beeb- beeb- beeb- beeb-” | (1 long 4 short tone, red led flash 1 long times and 4 short times) | Initial Brake Force |
| (10) “beeb----- beeb-----” | (2 long tone, red led flash 2 long times) | Reverse Force |
| (11) “beeb----- beeb----- beeb-----” | (3 long stone, red led flash 3 long times) | Restore all to default and Exit |

Note: 1 long “beeb-----” = 5 short “beeb-”, flash 1 long times=5 short times



3. Set item value


After entering the item, you will hear several tones and green led flash in loop, Set the value matching to a tone by press the “SET” KEY within 2 second when you hear the tone, then you will hear special tone like “♪ 5 6 5 6”. It means the value is set and saved.

Hold the SET KEY for 3 second, you will go back to step 2. if release the SET KEY within 2 second, you will exit the program mode quickly.


Items \ Tone	beeb-,1 tone	beeb-beeb-,2 tone	beeb-...,3 tone	beeb-...,4 tone	beeb-----,1 long	beeb-.....,N tone
	green led flash 1 short times	green led flash 2 short times	green led flash 3 short times	green led flash 4 short times	tone green led flash 1 long times	green led flash N times
1. Brake Force	50%	75%	100%			
2. Drag Brake	0	5%	10%	15%	20%	
3. Run Mode	ONE	TWO	TWO2			
4. Start Force	20%	25%	30%	35%	40%	
5. Li-xx Cells Number	Auto detect	2 cells	3 cells	4cells	5 cells	N cells
6. Cutoff threshold	2.5V	2.8V	3.1V			
7. Timing	Low	Mid	High	Highest		
8. Neutral Range	6%	8%	10%			
9. Initial Brake Force	5%	10%	20%	30%		
10. Reverse Force	25%	50%	75%	100%		

- Note:**
- 1 long “beeb-----” = 5 short “beeb-”. For example, in “Li-xx Cells Number” setting, 1 long “beeb-----” plus 1 short “beeb-” (5+1=6), means a 6 cells Li-xx battery pack..
 - 2.The boldface in above form is the default value.
 3. Low voltage Protection threshold (Cutoff voltage) = Li-xx Cells Number * Cutoff threshold. **Cutoff threshold** is Protection threshold for one cell Li-xx. For example: if Li-xx Cells Number is 3 and **Cutoff threshold** is 3.1V, the cutoff voltage will be: 3.1V*3=9.3V.
 4. In step 2, after 3 long tone (The item #11), if release the “SET” KEY within 2 seconds, you will exit program. But if you don’t change other item value, the ESC will restore all items to default value, and makes two “beep-” sounds.

Throttle Diagram

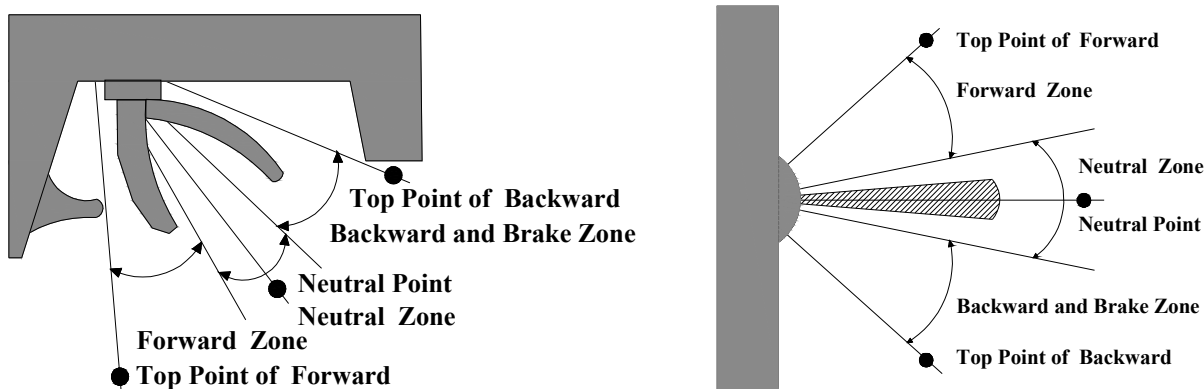

Wiring Diagram

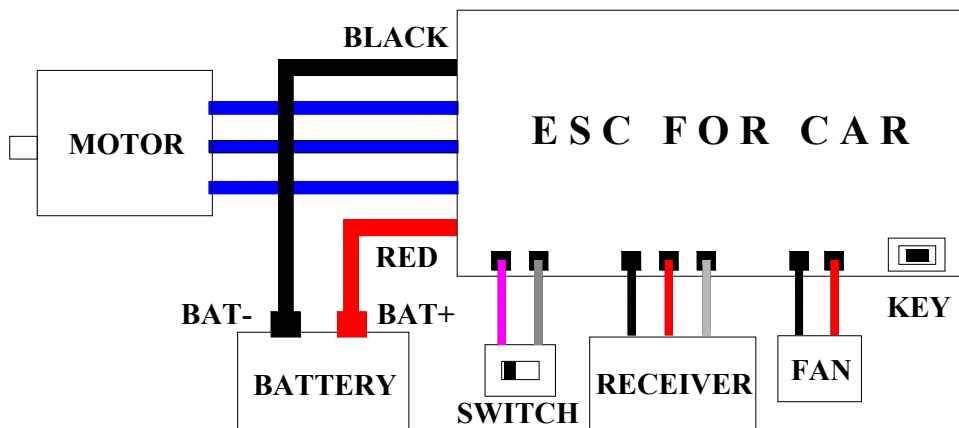




Using program card









Adopting 2x16 point LCD panel, program card can make all setting conveniently and directly.

The keys function

KEY				WR
FUNCTION	To move the cursor horizontally	To move the cursor vertically and change item or item value	To confirm selected item or item value.	To write and save setting parameter to ESC

Program procedure

1. Unplug the battery of ESC and connect the PPM wire to program card properly.
2. Connect the battery to ESC, program card will read the parameter from ESC and display on LCD panel.
3. Push  to select programmable items and push  to enter the item.
4. Use  key to move the cursor to proper place (if it need), use  to select or change item value (programmable Value) and push  to confirm.
5. When all setting is finished, push **WR** to save to ESC. After that, you can push  to check updated parameter.

Parameter Display

Item	Specification	Option or value	Default
1.OffVolt=	Low Voltage Protection Threshold	00.0V—49.9V	00.0V
2. BrakeForc:	Brake Force	50%,75%,100%	100%
3. DragBrake:	Drag Brake	0,5%,10%,15%,20%	0
4. RunMode:	Run Mode	One, Two, Two2	Two2
5. StartForc:	Start Force	20%,25%,30%,35%,40%	30%
6. Timing:	Timing	low, middle ,high and highest	middle
7.NeutRange:	the neutral range of throttle	6%,8%,10%	8%,
8. InitBrake:	Initial Brake Force	5%,10%,20%,30%.	5%
9. ReverForc:	Reverse Force	25%,50%,75%,100%.	50%